


Ordering method


SR1-X

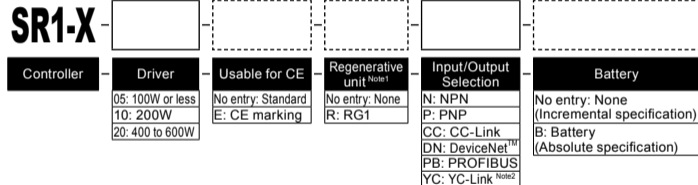

Note 1. Driver selection and regenerative unit selection depends on the robot type. See the selection table on the next page for selecting the driver/regenerative circuit.

Note 2. Available only for the slave.

SR1-P

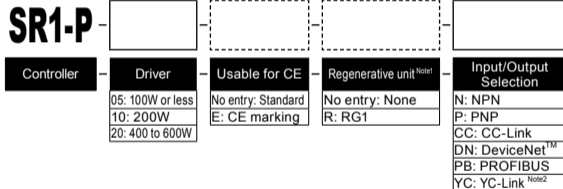

Note 1. Driver selection and regenerative unit selection depends on the robot type. See the selection table on the next page for selecting the driver/regenerative circuit.

Note 2. Available only for the slave.